



ENGLISH

FRANÇAIS

ESPAÑOL

OWNER'S MANUAL

# AIR CONDITIONER

Please read this manual carefully before operating your set and retain it for future reference.

Vertical Air Handling Unit



P/NO : MFL67449218

<http://www.lghvac.com>  
[www.lg.com](http://www.lg.com)

## Vertical Air Handling Unit Owner's Manual

# TABLE OF CONTENTS

## Safety Precautions.....3

## Prior to Operation .....6

## Operating Instructions.....7

### Simple Wired Remote Controller.....7

### Standard Operation - Cooling Mode.....8

### Standard Operation - Heating Mode.....9

### Standard Operation - Dehumidification Mode .....10

### Standard Operation - Fan Mode.....11

### Function Setting - Fan Speed Selection.....12

### Function Setting - Room Temperature Check.....13

### Function setting - Child Lock14

### Different mode drive .....15

### Wired Remote Controller (Accessory).....16

### Sub function (wired remote controller)-Internal Electric Heater.....17

### Wireless Remote Controller (Accessory).....18

### Sub function (wireless remote controller)-Internal Electric Heater.....19

## Maintenance and Service ....20

### When the air conditioner is not going to be used for a long time.....21

### Operation Tips.....21

### Before you Call for Service.....22



## FOR YOUR RECORDS

Write the model and serial numbers here:

**Model #** \_\_\_\_\_

**Serial #** \_\_\_\_\_

You can find them on a label on the side of each unit.

**Dealer's Name** \_\_\_\_\_

**Date Purchased** \_\_\_\_\_

■ Staple your receipt to this page in the event you need to prove date of purchase or to issue warranty.



## READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of

**Troubleshooting Tips** first, you may not need to call for service at all.



## PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



## Safety Precautions



To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

**⚠ WARNING** This symbol indicates the possibility of death or serious injury.

**⚠ CAUTION** This symbol indicates the possibility of injury or damage to properties only.

- Meanings of symbols used in this manual are as shown below.

	<b>Be sure not to do.</b>
	<b>Be sure to follow the instruction.</b>

### ⚠ WARNING

#### ■ Installation

**Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.**

- There is risk of fire or electric shock.

**For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.**

- Do not disassemble or repair the product. There is risk of fire or electric shock.

**Always ground the product.**

- There is risk of fire or electric shock.

**Install the panel and the cover of control box securely.**

- There is risk of fire or electric shock.

**Always install a dedicated circuit and breaker.**

- Improper wiring or installation may cause fire or electric shock

**Use the correctly rated breaker or fuse.**

- There is risk of fire or electric shock.

**Do not modify or extend the power cable.**

- There is risk of fire or electric shock.

**Do not install, remove, or re-install the unit by yourself (customer).**

- There is risk of fire, electric shock, explosion, or injury.

**Be cautious when unpacking and installing the product.**

- Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.

**For installation, always contact the dealer or an Authorized Service Center.**

- There is risk of fire, electric shock, explosion, or injury.

**Do not install the product on a defective installation stand.**

- It may cause injury, accident, or damage to the product.

**Be sure the installation area does not deteriorate with age.**

- If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.



## Safety Precautions

### ■ Operation

**Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.**

- Moisture may condense and wet or damage furniture.

**Take care to ensure that power cable could not be pulled out or damaged during operation.**

- There is risk of fire or electric shock.

**Do not place anything on the power cable.**

- There is risk of fire or electric shock.

**Do not plug or unplug the power supply plug during operation.**

- There is risk of fire or electric shock.

**Do not touch(operate) the product with wet hands.**

- There is risk of fire or electrical shock.

**Do not place a heater or other appliances near the power cable.**

- There is risk of fire and electric shock.

**Do not allow water to run into electric parts.**

- It may cause There is risk of fire, failure of the product, or electric shock.

**Do not store or use flammable gas or combustibles near the product.**

- There is risk of fire or failure of product.

**Do not use the product in a tightly closed space for a long time.**

- Oxygen deficiency could occur.

**When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.**

- Do not use the telephone or turn switches on or off.  
There is risk of explosion or fire

**If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.**

- There is risk of electric shock or fire.

**Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.**

- There is risk of property damage, failure of product, or electric shock.

**Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)**

- There is risk of physical injury, electric shock, or product failure.

**When the product is soaked (flooded or submerged), contact an Authorized Service Center.**

- There is risk of fire or electric shock.

**Be cautious that water could not enter the product.**

- There is risk of fire, electric shock, or product damage.

**Ventilate the product from time to time when operating it together with a stove, etc.**

- There is risk of fire or electric shock.

**Turn the main power off when cleaning or maintaining the product.**

- There is risk of electric shock.

**When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.**

- There is risk of product damage or failure, or unintended operation.

**Take care to ensure that nobody could step on or fall onto the outdoor unit.**

- This could result in personal injury and product damage.



**CAUTION****Installation**

**Always check for gas (refrigerant) leakage after installation or repair of product.**

- Low refrigerant levels may cause failure of product.

**Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.**

- It may cause a problem for your neighbors.

**Install the drain hose to ensure that water is drained away properly.**

- A bad connection may cause water leakage.

**Use two or more people to lift and transport the product.**

- Avoid personal injury.

**Keep level even when installing the product.**

- To avoid vibration or water leakage.

**Do not install the product where it will be exposed to sea wind (salt spray) directly.**

- It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

**Operation**

**Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)**

- This could harm to your health.

**Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.**

- There is risk of damage or loss of property.

**Do not block the inlet or outlet of air flow.**

- It may cause product failure.

**Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.**

- There is risk of fire, electric shock, or damage to the plastic parts of the product.

**Do not touch the metal parts of the product when removing the air filter. They are very sharp!**

- There is risk of personal injury.

**Do not step on or put anything on the product. (outdoor units)**

- There is risk of personal injury and failure of product.

**Always insert the filter securely. Clean the filter every two weeks or more often if necessary.**

- A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

**Do not insert hands or other objects through the air inlet or outlet while the product is operated.**

- There are sharp and moving parts that could cause personal injury.

**Do not drink the water drained from the product.**

- It is not sanitary and could cause serious health issues.

**Use a firm stool or ladder when cleaning or maintaining the product.**

- Be careful and avoid personal injury.

**Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.**

- There is risk of fire or explosion

**Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.**

- They may burn or explode.

**If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.**

- The chemicals in batteries could cause burns or other health hazards.

**If you eat the liquid from the batteries, brush your teeth and see doctor. Do not use the remote if the batteries have leaked.**

- The chemicals in batteries could cause burns or other health hazards.

**Change the air filter at least every 2 months.**

- Dirty filters greatly restrict the flow of air and may cause damage to the moving parts.
- If the filters become clogged the Electric Heaters and blower motor could overheat resulting in a potentially dangerous situation.





*Prior to operation*

---

## **Prior to Operation**

### ***Preparing for operation***

1. Contact an installation specialist for installation.
2. Plug in the power plug properly.
3. Use a dedicated circuit.
4. Do not use an extension cord.
5. Do not start/stop operation by plugging/unplugging the power cord.
6. If the cord/plug is damaged, replace it with only an authorized replacement part.
7. Air filter is not factory installed. It must be purchased separately.

### ***Usage***

1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

### ***Cleaning and maintenance***

1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.


### ***Service***

For repair and maintenance, contact your authorized service dealer.



# Operating Instructions

## Simple Wired Remote Controller

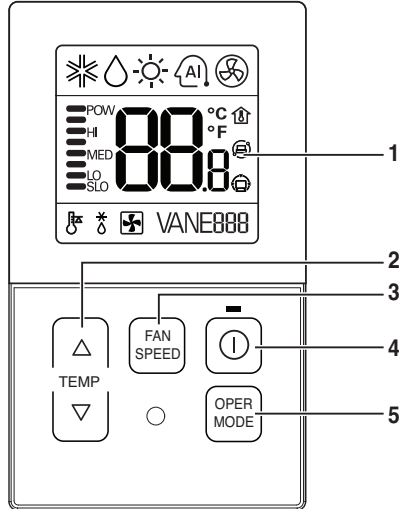

Each function will be shown on the display panel for three second or so when the power is applied at first.

### 1. Operation Display Panel

Displays the operation conditions.

### 2. Temperature Control Button

Used to set the temperature when the desired temperature is obtained.

### 3. Fan Speed Button

Used to set desired fan speed.

### 4. On/Off Function

Operation starts when this button is pressed, and stops when the button is pressed again.

### 5. Mode Selection Check Button

Used to select the operation mode.


- Cooling operation
- Heating operation
- Auto-operation
- Dry (Dehumidification) operation
- Fan operation


MODEL : PQRCVCL0QW

## Operating Instructions

### Standard Operation - Cooling Mode

It cools the room by comfortable and clean wind.

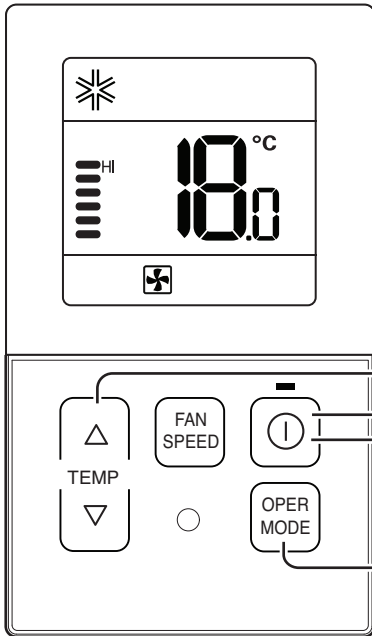

**1** Cooling operation will begin if you press the  button.

**2** Press the temperature button and set the desired room temperature lower than the current room temperature.



A click of the button will increase the desired temperature by 1°C or 2°F.

A click of the button will decrease the desired temperature by 1°C or 2°F.

- Setting temp range : 18°C~30°C (64°F~86°F)
- If the desired temperature is set higher than the current room temperature, the cooling function will not begin and just the blowing operation will continue.


**3** If you press the mode button during the operation, the operation mode will be changed in the order of cooling, dry(dehumidification), heating, auto-operation and fan operation. If the product is a cooling-only model, the operation mode will be changed in the order of cooling, dry(dehumidification), auto-operation and fan operation.



**4** If you press the  button, the cooling operation will stop.



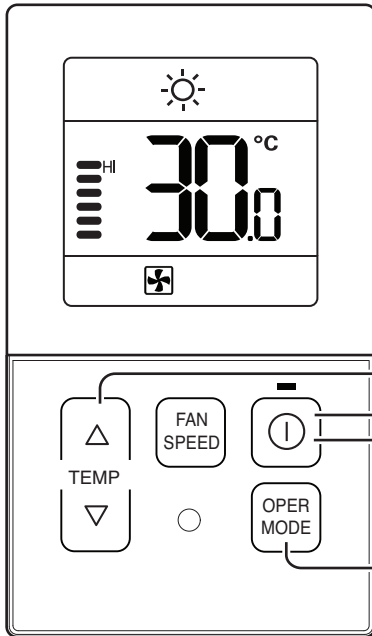

## Standard Operation - Heating Mode

It supplies warm wind to the indoor




- 1** If you want to set the heating operation, press the  button. And press the  button.
- 2** Set the desired room temperature higher than the current room temperature.

  
 TEMP  


— A click of the button will increase the desired temperature by 1°C or 2°F.

— A click of the button will decrease the desired temperature by 1°C or 2°F.

  - Setting temp range : 16°C~30°C (60°F~86°F)
  - If the desired temperature is set lower than the current room temperature, the heating function will not begin.
- 3** If you press the mode button during the operation, the operation mode will be changed in the order of cooling, dry(dehumidification),heating,auto-operation and fan operation.
- 4** If you press the  button, the cooling operation will stop.

### What is the three-minute delay function?

It will take time for the product to blow warm air. The delay is to protect the compressor. The room will be heated with warm air after three minutes when the compressor begins operation.

## Standard Operation - Auto Operation

In this operation mode, the system is automatically operated by the electronic controls.

- You can set the desired temperature between 18°C(64°F) and 30°C(86°F) for Auto Operation mode.


### **NOTICE**




This function properly operates when you use the remote controller matching each model.

## Operating Instructions

### Standard Operation - Dehumidification Mode

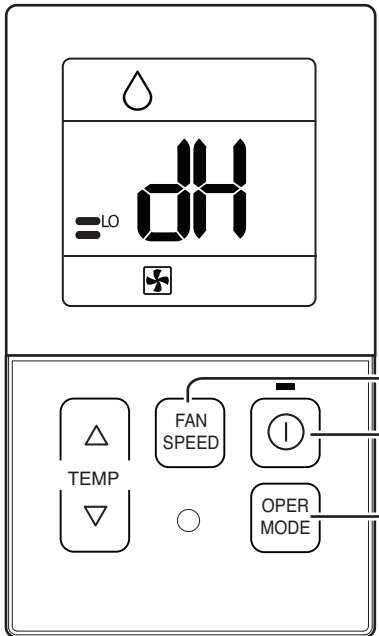It removes humidity while air-cooling weakly.







- 1** After operating the product by pressing the  button, set up the dry (Dehumidification) by pressing the  button.
- 2** When the dry operation is selected, "dh" will be shown on the display window as shown on the left side.
  - The temperature setting can not be adjusted during operation this mode.
- 3** Press the  button to select airflow rate [Lo→Med→Hi].
  - The initial wind powerfulness of humidity removal drive is 'weak'.

- In rainy season or high humidity climate, it is possible to operate simultaneously dehumidifier and cooling mode to remove humidity effectively.
- The menu item of wind powerfulness might not be partially selected according to the product.

## Standard Operation - Fan Mode

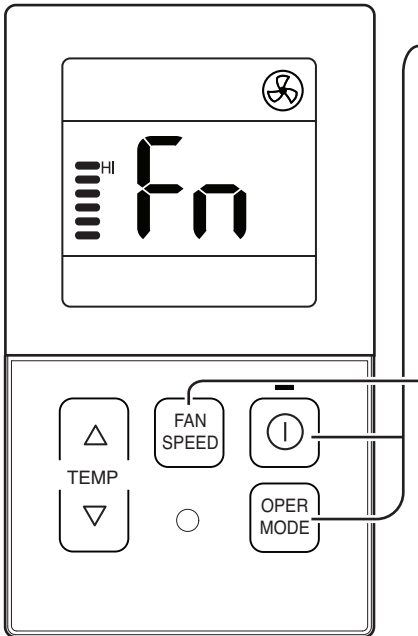It blows the air as it is in the indoor, not the cold wind.




- 1** After operating the product by pressing the  button, set up the fan operation by pressing the  button.
- 2** When the dry operation is selected, "Fn" will be shown on the display window as shown on the left side.
  - The temperature setting can not be adjusted during operation this mode.
- 3** Press the  button to select airflow rate [Lo→Med→Hi].  
When running ventilation, compressor of AHU doesn't work.



- Ventilation drive does not release cool wind but general fan
- Because it releases the wind that has no temperature difference from the room, it functions to circulate the inside air.
- The menu item of wind powerfulness might not be partially selected according to the product.

## Operating Instructions


### Function Setting - Fan Speed Selection

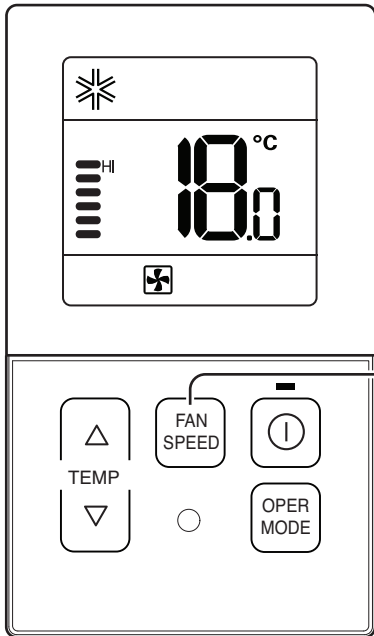It blows the air as it is in the indoor, not the cold wind.



- 1 Select the proper fan speed which you want by pressing the  button on the remote controller.
  - If you press the  button, the fan speed will change in the order of [Lo→Med→Hi].
  - The initial fan speed is "Hi".
  - If the product is not compatible with the fan speed Control, it will not function as per your selection.


#### Fan Speed Selection in Cooling Operation

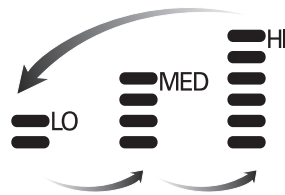

#### Fan Speed Selection in Heating, Dry, Fan



## Function Setting - Room Temperature Check

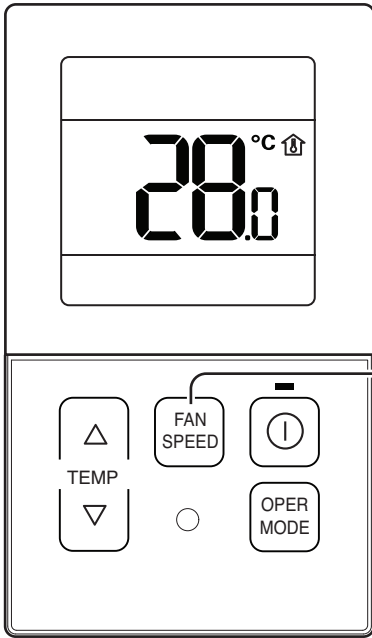

- 1 When pressing the **FAN SPEED** button of the remote controller Adjustment section for approx. 3 seconds, the room Temperature will be indicated for about 5 seconds Before resuming to the previous display panel.


In the case of the room temperature display, the room Temperature can be different in accordance with the Setting of the remote controller's room temperature Detection selection.



\* As the temperature distribution of the remote controller Installation space is not uniform, slight difference can be Generated between the actually felt temperature and the room temperature indication of the remote controller.

## Operating Instructions

### Function setting - Child Lock

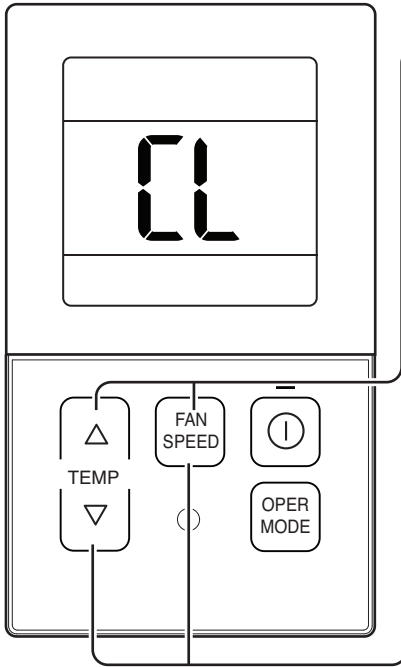

It is the function to use preventing children or others from careless using.





**1** During the operation, when pressing the  button and  button for approx. 3 seconds, the 'Child Lock' Function can be used.

- At the time of initial setting of the 'Child Lock', the 'CL' Will be indicated approx. 3 seconds at the temperature Display section before resuming to the previous mode.

After the setting of the 'CL', if another button is setup, the button can not be recognized as the 'CL' is indicated at the temperature display section for approx. 3 seconds.


**2** If the 'CL' function is wanted to be used under the operation standby state, press the  button and  Button for approx. 3 seconds under the standby mode state and the system will be the 'CL' state.

**3** As for the releasing method, when pressing the  Button and  button for approx. 3 seconds, the 'CL' function can be released.

## Different mode drive

Different mode drive is a phenomenon taking place when indoor units' drive mode is different in the case that a few indoor units are set up at one AHU.

(Different mode drive doesn't show up at cooling exclusive model.)

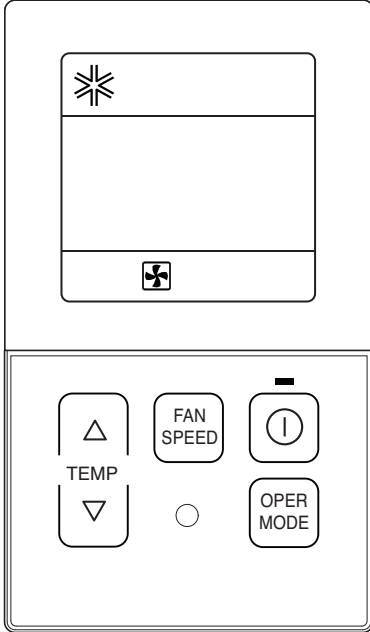


**1** If one indoor unit operate heating mode while several indoor units are operating cooling mode, outdoor segment and cooling segment are blinking like display on the left.

=> It means operation of cooling mode in outdoor unit.

**2** If one indoor unit operate cooling or dehumidification mode while several indoor units are operating heating mode, outdoor segment and cooling segment are blinking.


=> It means operation of heating mode in outdoor unit.

**3** If pressing  button, indoor unit automatically runs at the mode that different indoor units are running after about 5 seconds and operates.

- If the product is not compatible with the different mode operation, LCD will be displayed 'CH07'.
- If 'CH07' is displayed, please change the mode.
- Different mode operation is not error.

## Operating Instructions

## Wired Remote Controller (Accessory)

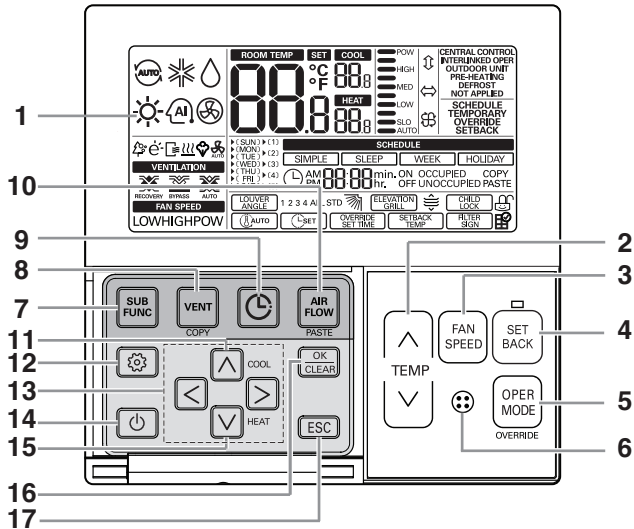

- |   |                                 |
|---|---------------------------------|
| 1 Operation indication screen   | 10 Air flow button              |
| 2 Set temperature button  | 11 Cooling desired temperature  |
| 3 Fan Speed button  | 12 Function setting button      |
| 4 Set back button   | 13 Up, Down, Left, Right button |
| 5 Operation mode selection button   | 14 On/Off button                |
| 6 Wireless remote controller receiver<br>• Some product don't receive the wireless signals. | 15 Heating desired temperature  |
| 7 Sub function button   | 16 Setting/Cancel button        |
| 8 Ventilation button  | 17 Exit button                  |
| 9 Reservation button  |                                 |


\* Some functions may not be operated and displayed depending on the product type.

**Model : PREMTB10U**



## Sub function (wired remote controller)-Internal Electric Heater

It is a function to strengthen the heating ability by turning on the internal electric heater during the heating operation. It can only be set during heating operation.

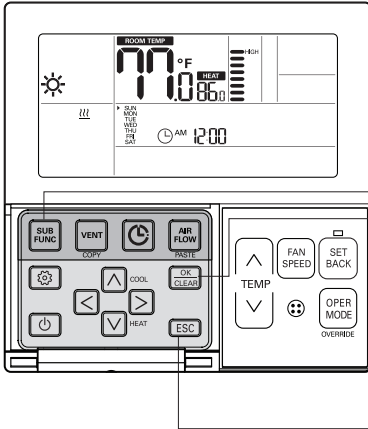

**1** Repeatedly pressing **SUB FUNC** button until **!!!** icon flash.



**2** Turn on/off internal electric heater by pressing **OK CLEAR** button (the **!!!** icon will be displayed in case of setting option and disappear in reverse case .)




**3** Press **ESC** button to exit.  
 \* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.  
 \* When exiting without pressing set button, the manipulated value is not reflected.



- Heater function is an additional function and operates only on models installed with internal electric heater. The heater must be LG made and has to be purchased separately. (Model: ANEH053B1, ANEH103B2). Contact LGE for the same.
- The remote control will automatically displays **!!!** icon when this additional heater function is turned on.
- This emergency heater can be turned on for heating operation during the cooling mode. For this operation the particular indoor unit must turned off to ensure the heating process. (By this the simultaneous heating and cooling can be achieved)
- This emergency internal electric heater can be “turned on” during the display of error code. During this emergency operation the heater icon will be displayed along with error code as shown below.  
 \* Exceptional case : Error code 1,3,9,10.  
 \* If the previous mode of Indoor unit is COOL, DRY or FAN ONLY mode, the heater must be turned on manually.
- When only VAHU is on a Internal electric heater and the other IDU is on cooling mode, Central-Controller displays Air Circulation and cannot control temperature, airflow and etc. If users input any order with Central-Controller, VAHU stops being on a electric heater. And if users input heating mode with Central-Controller, different operation mode may occur. So please select same mode with the others.  
 (Central-Controller : Simple Central Controller, AC Smart, Option Kit & 128 Units Expansion Kit, ACP & AC Manager Plus)



### NOTICE

 For detailed operational setting please refer wired remote controller manual.

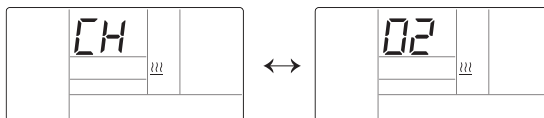

## Operating Instructions

### Wireless Remote Controller (Accessory)

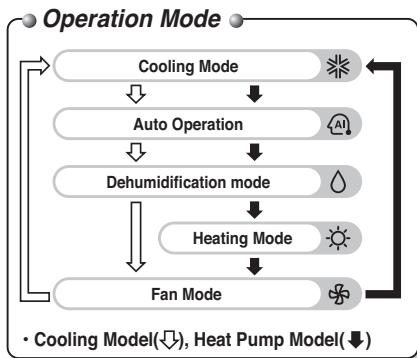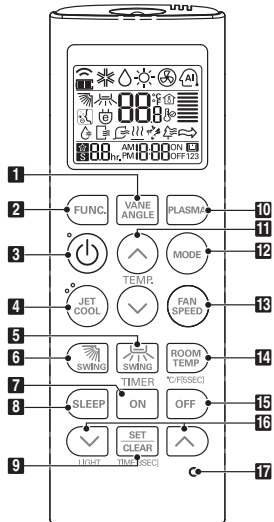

Model : PQWRHQ0FDB

#### NOTE

\* Some functions may not be operated and displayed depending on the product type.

#### 1. VANE ANGLE Button

Used to set each vane angle.

#### 2. FUNCTION SETTING Button

Used to set or clear Auto Clean, Smart Clean, Electric heater or Individual vane angle control.

#### 3. ON/OFF Button

Used to turn on/off the unit.

#### 4. JET COOL Button

Speed cooling operates super high fan speed.

#### 5. LEFT/RIGHT AIRFLOW Button (OPTIONAL)

Used to set the desired left/right(horizontal) airflow direction.

#### 6. UP/DOWN AIRFLOW Button

Used to stop or start louver movement and set the desired up/down airflow direction.

#### 7. ON TIMER Button

Used to set the time of starting operation.

#### 8. SLEEP TIMER Button

Used to set the time of sleeping operation.

#### 9. SET / CLEAR Button

Used to set/clear the timer.

Used to set the current time(if it input for 3sec.)

#### 10. PLASMA Button (OPTIONAL)

Used to start or stop the plasma-purification function.

#### 11. ROOM TEMPERATURE SETTING Button

Used to select the room temperature.

#### 12. OPERATION MODE SELECTION Button

Used to select the operation mode.

#### 13. INDOOR FAN SPEED SELECTION Button

Used to select fan speed in four steps low, medium, high and chaos.

#### 14. ROOM TEMPERATURE CHECKING Button

Used to check the room temperature.

#### 15. OFF TIMER Button

Used to set the time of stopping operation.

#### 16. TIMER SETTING(Up/Down)/LIGHT Button

Used to set the timer.


Used to adjust the brightness.(if it is not time adjust mode)

#### 17. RESET Button

Used to reset the remote controller.

**Sub function (wireless remote controller)-Internal Electric Heater****It can only be set during heating operation.**

- 1** Press the FUNCTION SETTING button 3 times.  
Internal Electric heater symbol will blink.

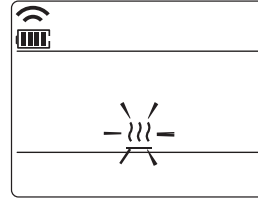

- 2** Press the SET/CLEAR button to reserve or cancel the internal electric heater function.



- The internal electric heaters must be purchased separately and installed.
- Heater function is additional function and it might not be operated at the partial product.
- Internal electric heater must be of LG made.  
(Model: ANEH053B1, ANEH103B2)
- If you want to buy heater, please contact LGE.

# Maintenance and Service



**CAUTION:** Before performing any maintenance, turn off the main power to the system.

## Air filter

Air filters must be purchased separately. Dirty filters greatly restrict the flow of air and may cause damage to the moving parts. If the filters become clogged the Electric Heaters and blower motor could overheat resulting in a potentially dangerous situation. The filters should be replaced at least once a month. On new construction, check the filters every week for the first four weeks and every three weeks after that, especially if the indoor fan is running continuously. When replacing the Filter you must use filters that are the same size as those recommended in Table 1.


## Filter Care

Inspect the air filter every month. If dirty, wash reusable filters with a mild detergent. Replace disposable filters with new filters. Filters should be clean to assure maximum efficiency and adequate air circulation. Drapes, furniture or other obstructions blocking your supply and return air grilles will also decrease efficiency.


## How to Clean your Filter

Permanent type, washable, High-velocity filters may be cleaned with a vacuum cleaner or taken away from the unit & washed with a garden hose. Be sure to shake off excess water and allow filter to completely dry before re-installing the filter.


1. Turn off the product, check the fan to stop.

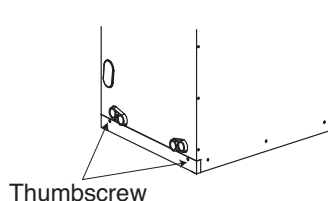

2. Release the thumbscrew.

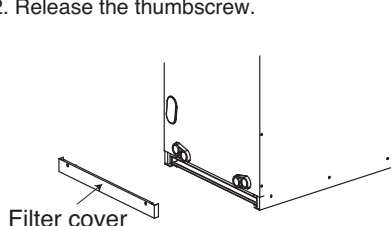

3. Take out the filter cover.

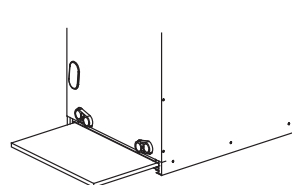

4. Slide dirty filter out, replace with a new filter.
5. To assemble in reverse order.

Table 1

Unit : Inch (mm)

Capacity (kBtu/h)		Disposable Filter Size for Built-in Filter Compartment
Single Zone	18 / 24	16 x 20 x 1 (406 x 508 x 25)
	36/ 42 / 48	20 x 24 x 1 (508 x 610 x 25)
Multi Zone	18 / 24	16 x 20 x 1 (406 x 508 x 25)
	36	20 x 24 x 1 (508 x 610 x 25)

### NOTICE

Filters should be used a rating of MERV 6 or less.  
If you use filters that has a rating MERV 7 or above, it can cause cooling & heating capacity down.

## When the air conditioner is not going to be used for a long time.

When it is not going to be used for a long time.

- 1 **Operate the air conditioner at the following settings for 2 to 3 hours.**
  - Type of operation: Fan operation mode.
  - This will dry out the internal mechanisms.

- 2 **Turn off the breaker.**



### CAUTION

Turn off the breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and may cause a fire.

### Helpful information

The air filters and your electric bill.  
If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

When the air conditioner is used again.

- 1 **Clean the air filter and install it in the indoor unit.**
- 2 **Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.**
- 3 **Check that the ground wire is connected correctly. It may be connected to the indoor unit side.**

## Operation Tips

**Do not overcool the room.**

This is not good for the health and wastes electricity.

**Make sure that the doors and windows are shut tight.**

Avoid opening doors and windows as much as possible to keep the cool air in the room.

**Keep blinds or curtains closed.**

Do not let direct sunshine enter the room when the air conditioner is in operation.

**Clean the air filter regularly.**

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

**Keep the room temperature uniform.**

Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

**Ventilate the room occasionally.**

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

## Before you call for service...



### Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persists, please contact your dealer.

<p><b>The air conditioner does not operate.</b></p> <ul style="list-style-type: none"> <li>• Have you made a mistake in timer operation?</li> <li>• Has the fuse blown or has the circuit breaker been tripped?</li> </ul>	<p><b>The room has a peculiar odor.</b></p> <ul style="list-style-type: none"> <li>• Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.</li> </ul>	<p><b>It seems that condensation is leaking from the air conditioner.</b></p> <ul style="list-style-type: none"> <li>• Condensation occurs when the airflow from the air conditioner cools the warm room air.</li> </ul>	<p><b>Air conditioner does not operate for about 3 minutes when restart.</b></p> <ul style="list-style-type: none"> <li>• This is the protector of the mechanism.</li> <li>• Wait about three minutes and operation will begin.</li> </ul>
<p><b>Does not cool or heat effectively.</b></p> <ul style="list-style-type: none"> <li>• Is the air filter dirty? See air filter cleaning instructions.</li> <li>• The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.</li> <li>• Has the temperature been set incorrectly?</li> <li>• Are the indoor unit's air inlet or outlet vents obstructed?</li> </ul>	<p><b>The air conditioner operation is noisy.</b></p> <ul style="list-style-type: none"> <li>• For a noise that sounds like water flowing.           <ul style="list-style-type: none"> <li>-This is the sound of freon flowing inside the air conditioner unit.</li> </ul> </li> <li>• For a noise that sounds like the compressed air releasing into atmosphere.           <ul style="list-style-type: none"> <li>-This is the sound of the dehumidifying water being processed inside the air conditioning unit.</li> </ul> </li> </ul>	<p><b>Crack sound is heard.</b></p> <ul style="list-style-type: none"> <li>• This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature.</li> </ul>	<p><b>Remote control display is faint, or no display at all.</b></p> <ul style="list-style-type: none"> <li>• Are the batteries depleted?</li> <li>• Are the batteries inserted in the opposite (+) and (-) directions?</li> </ul>

#### **NOTICE**

**WATER RESISTANT:** The outdoor side of this appliance is WATER RESISTANT. The indoor side is not water resistant and should not be exposed to excess water.

